



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instruțiuni de montaj
Návod na montáž



Volkswagen ID.4 (2020->)

ID4 BEZ KL


SOLARRIDE Zaslónki, oslony przeciwsłoneczne do Volkswagen ID.4 BEZ KL 2kg

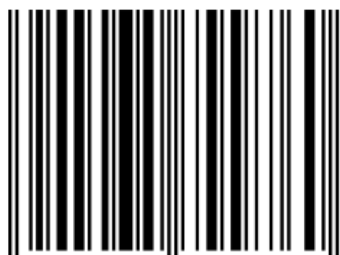

5 904035 799760 >




Videoinstrukcja - zeskanuj kod QR
Videoinstruction - scan the QR code
Video návod - naskenujte QR kód
Instruction vidéo - scanner le code QR
Video de instrucciones: escanee el código QR
Videoanleitung - Scannen Sie den QR-Code
Video de instrucciones: escanee el código QR
Instruções em vídeo - digitalizar o código QR
Istruzioni video - scansiona del codice QR

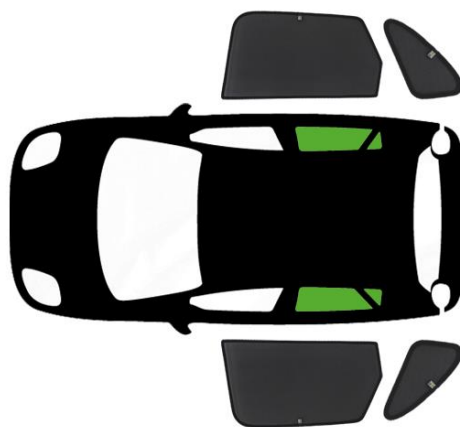

4 x



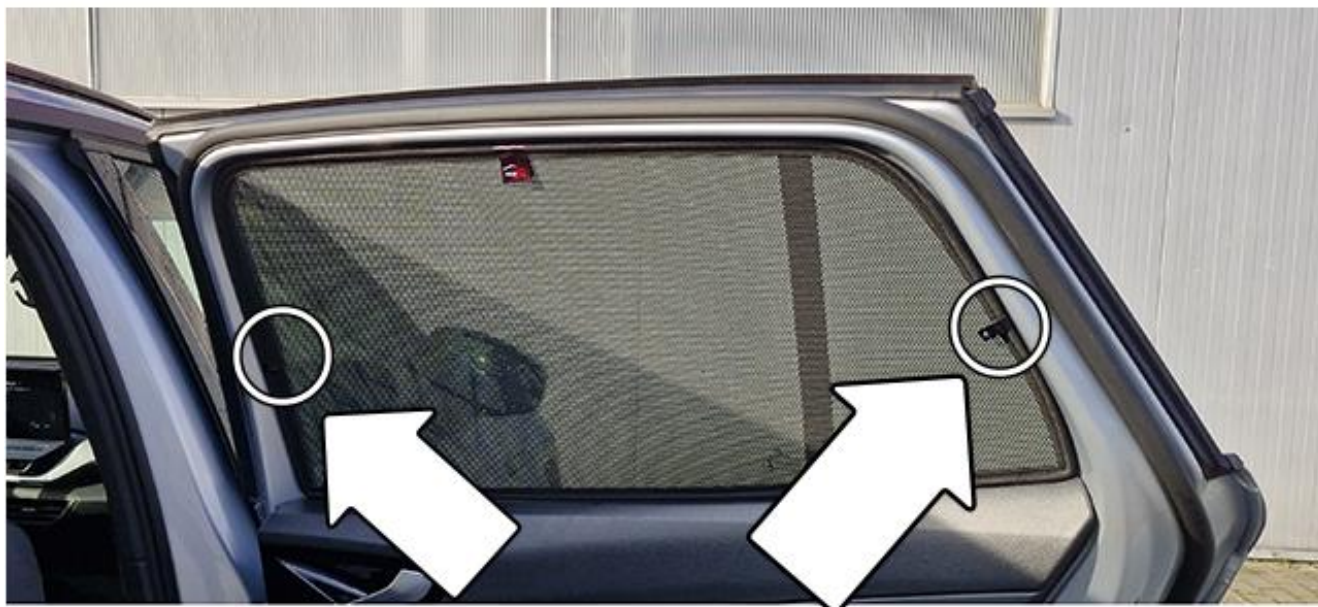

- Zastlonki przestrzeni bagażowej instaluje się na wcisk.
- Car shades of the luggage compartment are installed press-fit without mounting clips.
- Stínítka zavazadlového prostoru se instalují lisováním bez montážních klipsů.
- Der Sonnenschutz des Gepäckraums wird durch Einpressen ohne Befestigungsklammern montiert.
- Le pare soleil du compartiment à bagages est installé par pression sans clips de montage.
- As cortinas laterais da bagageira são montadas por pressão sem cliques de fixação.
- Las cortinillas laterales del maletero se montan a presión, sin clips de fijación.
- Le tendine laterali del bagagliaio sono montate a pressione senza clip di fissaggio.
- Bočne zavjese prtljažnika su presovane bez kopči za pričvršćivanje.
- Perdelele laterale ale compartimentului pentru bagaje sunt montate prin presare, fără cleme de fixare.
- Bočné clony batožinového priestoru sa montujú lisovaním bez upevňovacích svoriek.



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

