



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instruțiuni de montaj
Návod na montáž



VW ID.3 (2019->)

VW ID.3 DR


SOLARRIDE ZASLONKI DEDYKOWANE VOLKSWAGEN ID.3 DR 1kg

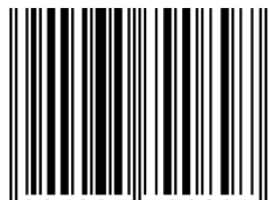

5 904035 790897 >



Videoinstrukcja - zeskanuj kod QR
Videoinstruction - scan the QR code
Video návod - naskenujte QR kód
Instruction vidéo - scanner le code QR
Video de instrucciones: escanee el código QR
Videoanleitung - Scannen Sie den QR-Code
Video de instrucciones: escanee el código QR
Instruções em vídeo - digitalizar o código QR
Istruzioni video - scansionare del codice QR

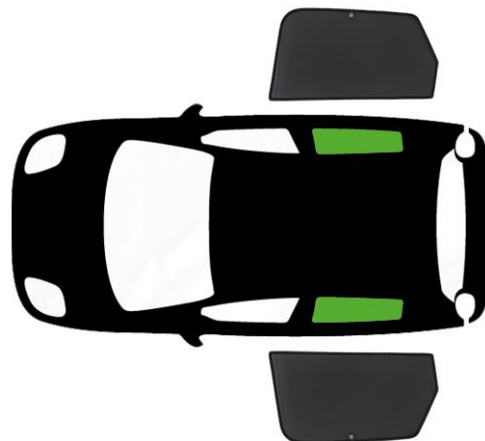

4x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

