



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Honda Accord VI Sedan (1997-2002)

ACCORD 6 DR

SOLARRIDE Zakonki, osłony przeciwsłoneczne do HONDA ACCORD 6 M SEDAN (1997-2002) 1lg



5 904035 791511 >

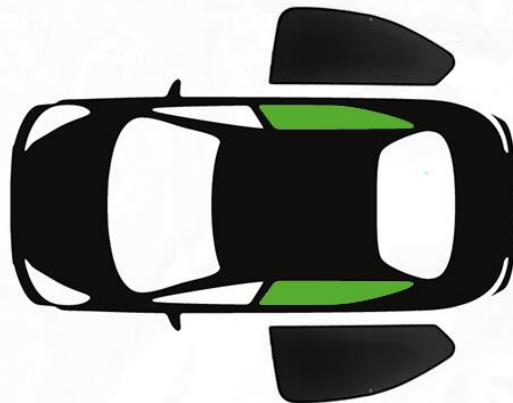

2x

